




Ceramic Style Grill Instructions

Ceramic Cooker Installation

Parts Needed:

- Adaptor Plate
- Expansion Clip

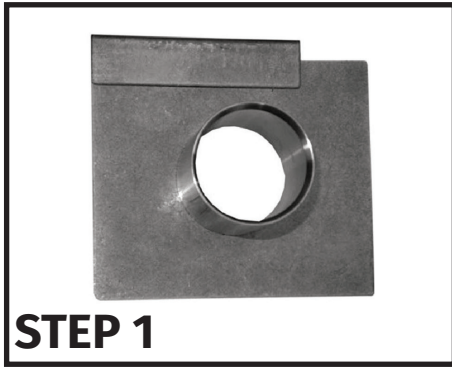

Place the Expansion Clip onto the top of the Adaptor Plate. Depending on the size of your ceramic cooker's draft door, you may have to rotate the adaptor 1/4 counterclockwise and place the Expansion Clip back on the Adaptor Plate.



Slide open your ceramic cooker's draft door. With the Draft Inducer Tube facing you and the Expansion Clip facing upwards, push the Adaptor Plate into the cooker's damper until it engages with the top and bottom tracks.



While holding the Expansion Clip in place in the top track, grip the inducer sleeve and pull down until the Adaptor Plate engages the bottom track. Push the Adaptor Plate to the left and under the stop tab.




Close the original manufacturer's draft door OVER the top of the Adaptor Plate until the leading edge touches the Draft Inducer Tube and the expansion clip moves all the way to the left. (Reverse order to remove.)




Insert the fan into the Draft Inducer Tube. You are now ready to cook!

NOTE: Run your probes into your cooker under the lid or through your top damper. Never run them through the firebox or bottom damper.

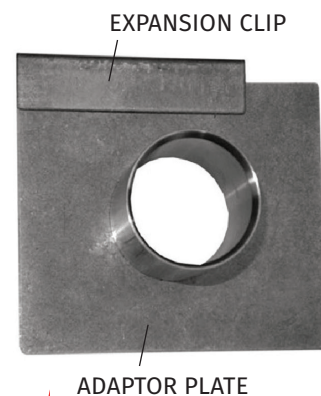

Place Expansion Clip like this for damper slide doors sized 2 3/4" to 3 1/4".

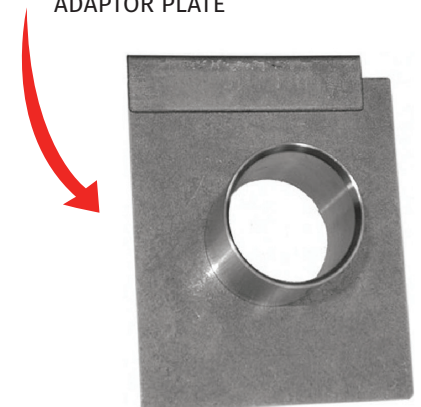

Rotate Adaptor Plate 1/4 counterclockwise and place Expansion Clip on top for damper slide doors sized 3 1/4" to 3 3/4".

IMPORTANT: Ceramic Style Grill Adaptor purchase only comes with one Adaptor Plate and Expansion Clip. Depiction of two adaptors is used to show multiple uses of tool for different sizes of damper slide doors.