



CharGriller Akorn Kamado

Adaptor installation

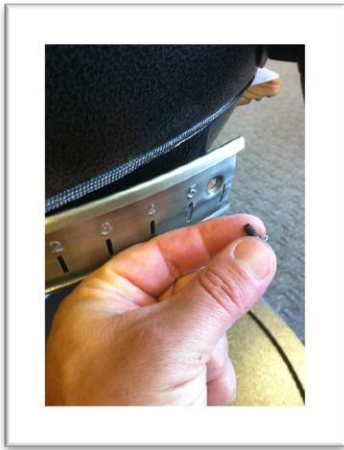

Step 1: Remove right screw from lower damper track

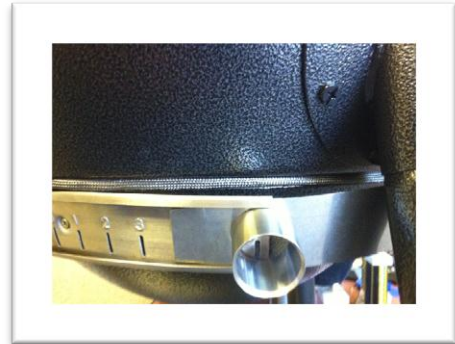

Step 2: Slide adaptor into track from right side



Step 3: Slide adaptor all the way over to the left



Step 4: Screw damper track back on

Step 5: Push fan into adaptor sleeve and installation is complete.



