

Mounting THE BBQ GURU To a Weber Smokey Mountain

Draft Inducer




Spider

Deflector Plate



Deflector Plate Opening

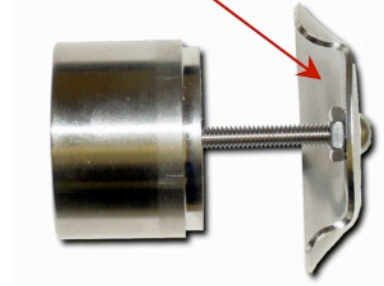

Step 1

Simply place the Draft Inducer on one of the three damper holes on the outside, bottom of the WSM kettle. Place the Deflector Plate on the inside of the same damper.



Make sure that the Draft Inducer sits against the damper hole with the spider closest to the damper plate.

Step 2

Screw together hand tight.



Point Deflector Plate opening downward. so that airflow is directed under the fire grate.

Step 3

Cover the two damper holes with the supplied high temperature foil tape and trim if desired.



Step 4

Place Power Draft Blower into Draft Inducer and you are ready to cook.



Note: Run your thermocouples wires into your cooker at the top of your access door or under the lid.

Important: Make sure the other two dampers are fully closed when you are ready to cook.